



COZY NIGHT

by

Sweet Dreams

Luxury Fleece Electric Blanket

FITTED MATTRESS COVER WITH A DEEP ELASTICATED SKIRT

Instructions for model: SDWUD, SDWUD, SDWUK, SDWUSK
Please read and retain for future reference

www.hsdonline.co.uk



Contents

Welcome.....	3
Safety instructions	4
Before first use / Positioning the blanket.....	7
Operation instructions	8
Cleaning and maintenance	9
Technical data	10
Environmental responsibilities	11
Warranty.....	12

Welcome to the

COZY NIGHT

by

Sweet Dreams

Luxury Fleece Electric Blanket Range

See more from Sweet Dreams here:



General information

Please read the entire instruction manual before using the product and then save it for future reference. We reserve the right for any errors in text or images and any necessary changes made to technical data. If you have any questions concerning technical problems please contact our Customer Services on **0800 091 3171**.

Safety instructions

Please read this instruction manual carefully before use and keep in a safe place for future reference. If you give the appliance to another person supply them with the instruction manual.

Intended use

This appliance is intended for use as a electric underblanket. Use it for domestic purposes and in the way indicated in this instruction manual. The appliance is designed for private use. The appliance is not suited for commercial use, medical use in hospitals, people fitted with pacemakers or pets.

Important

The electric blanket can only be used with the controls that are listed on the electric underblanket labels.

CAUTION! Do not operate any appliance if:

- Power cable is damaged.
- Do not use if Wet.
- After unpacking, ensure that the item is intact with no visible signs of damage that could be caused during delivery. If damaged contact our customer services number shown on page 4.
- In case of malfunction or if it has been dropped or damaged in any manner.
- Should the cable be damaged, it must be replaced by a competent qualified electrician

CAUTION! An electric appliance is not a toy!

- Never leave the appliance unsupervised when in use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- NOT to be used by young children (0-3 years). Children under the age of three are not to use this appliance due to their inability to react to overheating.
- Not to be used by children over the age of 3 unless the controls have been preset by a parent or guardian or unless the child has been adequately instructed on how to operate the controls safely.
- Explain to your children all risks which can be caused by electric currents.
- Do not use it on persons insensitive to heat, helpless persons, infants or children without supervision. Do not use to warm animals.

CAUTION! Do not leave packaging components (plastic bags, cardboard, polystyrene, etc.) within easy reach of children, danger of suffocation!

ALWAYS check that the power supply corresponds to the voltage shown on the rating plate.

Unplug the appliance

1. Before removing or changing accessories.
2. Before cleaning accessories or the appliance.
3. When malfunctioning during use.
4. To unplug pull the plug, never pull on the power cable to avoid damage.
5. Never move the appliance by pulling the power cable. Make sure the power cable cannot get caught in any way and is not a trip hazard.
6. Do not wind the power cable around the appliance and do not bend it. From time to time check if the power cable is damaged. If the appliance power cable is damaged please do not use and contact your place of purchase.

CAUTION! Danger of electric shock!

Appliance power cable and plug should never come into contact with water or any other liquids.

- Never immerse the appliance when connected with the power cable or the plug in water or any other liquid for any reason whatsoever.
- Never use the appliance near a sink, or bathtub.
- Never touch the appliance with wet hands or standing on wet ground.
- Never place the appliance on wet surfaces.
- Never use the appliance outdoors. The appliance is not suited for outside use.

Additional protection may be obtained by fitting a residual current device that must not exceed 30 mA (IF < 30mA) into your home installation. Please consult a qualified electrician.

Plugging in the appliance

Before first use ensure that your mains voltage corresponds to that stated on the rating plate of the appliance. Connect this appliance to a plug which is wired according to UK regulations.

- Run the cable in a way that nobody can trip over it or pull on it to avoid accidents.
- Take care that the cable never comes into contact with sharp edges and hot objects.

ATTENTION! If this electric underblanket is used on an adjustable bed, check that the blanket and cord do not become trapped or rucked, for example in hinges.

- The item must never be used folded or crumpled.
- Do not pull on the power cable, twist or bend it sharply.
- Do not pierce the appliance with needles!
- Only use original accessories.
- Never leave the appliance unattended during operation and always unplug after use.

ATTENTION! This electric underblanket must only be used for its intended purposes which is an electric underblanket.

NEVER tuck in or fold any of the wired areas or the control unit.

Before first use

- Remove all packaging parts before initial operation and save for future storage.
- When the item is used for the first time like any new item it may let off a slight odour but this will disappear after a short while.

Positioning the Electric Underblanket

1. Position the electric underblanket evenly over the mattress, ensuring it is lying flat without any rucks or creases.
2. The electric underblanket should be positioned so that the connectors and controllers are positioned to the top of the mattress where the pillows will be located.
3. Tuck the electric underblanket skirt into the bottom of the mattress. The electric underblanket skirt is specially designed to fit all modern mattresses.
4. Do not tuck in any of the wired areas of the controller or the controller, make sure they are not in contact with any sharp surfaces, they are easy accessible and not a trip hazard.
5. Once fitted correctly, additional bed sheets and quilts should be placed over the electric underblanket.



Operation

Single size blankets are fitted with a single control. Double, King and Superking are fitted with two controls to allow each user to set the temperature to their own individual requirements.

With the electric underblanket you can gently warm and relax your whole body. The heating blanket features an electric temperature control that regulates precisely the warmth-supply according to the chosen heat setting (1-9). The easy-care material and the detachable operating control or controls make the electric underblanket machine washable up to 30°C.



Temperature

Plug the product into a mains power socket and press the ON/OFF button. The display window will illuminate on heat setting 0. To change the heat setting level press temperature level setting button “-” to decrease heat settings or “+” to increase the heat setting. The temperature level can be set to 1-8 or the maximum temperature level 9. To use heat settings 5 or 6 to pre-heat the electric blanket 10-15 minutes before going to bed. Should the electric underblanket get too warm for you, just press the temperature level setting “-” button to lower the temperature level. To switch OFF the device, press the ON/OFF button. The electric underblanket is designed so temperature setting levels 1, 2 or 3 are suitable for continuous use. Temperatures may vary depending on room temperature and type or amount of bed linen used.

Timer

The controller of the electric underblanket has a timer button with “+” button and “-” button. You can press these buttons to control how long you want the electric underblanket to be left on. You can set the timer for up to 9 hours, it is recommended if you intend to use the electric underblanket for up to 9 hours to have it on heat setting 1, 2 or 3. Please note the display will revert back to heat setting display once the timer is set.

Cleaning and maintenance

NEVER DRY CLEAN

Before washing the electric underblanket, unplug it from the mains power socket and let it completely cool down. Unplug the control units from the electric under blanket. The electric underblanket may be washed by machine according to the instructions on the label at 30 degrees Celsius. Always ensure the controls are detached from the electric underblanket before washing and NEVER immerse the control units in water.

To best dry the electric underblanket, hang on a clothes line to dry naturally without using securing pegs, never dry in a dryer and never iron. When the electric underblanket is completely dry, it should be reconnected to the control switch unit in the correct manner. The electric underblanket must only ever be operated with the control unit provided. When storing the electric underblanket, allow it to cool down before folding. Store the electric underblanket in a clean and dry place.

When not in use

When storing, do not place any objects on the electric underblanket to prevent buckling and damage to the internal wiring. Never use any moth proofing chemicals or products.

Examine the electric underblanket frequently for signs of wear or damage, if there are such signs or if the electric underblanket has been misused or does not work, contact your supplier before switching on again.

Technical data

Power supply: 220 - 240 V~ 50 Hz

Heat output controller: 90w X 1 for SDWUS

Heat output controller: 70w X 2 for SDWUD & SDWUK

Heat output controller: 80w X 2 for SDWUSK

Time Settings: 1 - 9 Hours

Heat levels: 1 - 9 Levels

Dimensions: approx.:

SDWUS - Single190 x 90 x 40cm

SDWUD - Double193 x 137 x 40cm

SDWUK - King203 x 152 x 40cm

SDWUSK - Superking200 x 180 x 40cm

Please note:

Single size blankets are fitted with a single control.

Double, King and Superking are fitted with two controls



USER FRIENDLY CONTROLS



ILLUMINATED DIGITAL DISPLAY



TIMER SETTINGS



HEAT SETTINGS



ADVANCED OVERHEAT PROTECTION



MACHINE WASHABLE AT 30°C

Environmental responsibilities



Meaning of crossed – out wheeled dustbin:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.

Contact your local council for information regarding the collection systems available.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain damaging your health and well-being.

When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposal free of charge.

12 months limited warranty

If within 12 months from the date of purchase you experience any problems with your product, please return the product to its distributor/dealer for repair or replacement. This warranty DOES NOT COVER normal wear, or any damage as a result of accidents, misuse, abuse or negligence.

SERVICE WARRANTY

Hygiene Supplies Direct guarantees the product free from defects in materials and workmanship for a period of 1 year from date of purchase.

Should this unit be operated under conditions other than those recommended, or any attempts made to service or modify the unit, then the warranty will be rendered void. The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights.

If you have any problems with this product, please call our Help Desk on 0800 091 3171 or email sales@hygienesuppliesdirect.com

Prem-i-air, St Helens, England WA9 3EX declares that Sweet Dreams Electric Blankets are exclusively manufactured and imported for Hygiene Supplies Direct Ltd.