

AHOMEFRONT
Heating Essentials

ACHHT01

Heated Electric Throw
Instruction Manual



Please read all
instructions carefully and
retain for future
reference.

Getting Started

- Remove the throw from the box.
- Remove any packaging from the product.
- Place packaging inside the box and either store or dispose of safely.

In the box

- Soft Throw with controller.
- Instruction manual (This booklet).


Features

- Removable controller.
- Washable blanket (with control removed).
- 9 heat settings.
- Timer.

Safety Instructions

- Ensure that the mains supply corresponds to the voltage on the rating label.
- This appliance is not intended for use by persons (including children) who are not mentally able, physically capable, experienced or do not understand the product. They should be given supervision and instruction in the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use the throw with young children, the infirm or any person who is insensitive to heat.
- Avoid extended use of this product as a build up of heat could cause over-heating of the body (heatstroke).
- Do not use the throw folded or tucked in.
- Do not crease the throw.
- Do not insert pins in the throw.
- Do not use if wet.
- This product should be checked regularly for damage to the throw, the controller or the cord. If there are any concerns the product should be checked by a qualified engineer also disconnect the appliance from the mains and do not continue to use the product.
- This product has no user-serviceable parts. Refer all servicing and repairs to a qualified engineer. Improper repairs may place user at serious risk.
- This appliance is intended for household use only and should not be used for industrial or commercial purposes.
- This product is not a toy.

Description of Parts

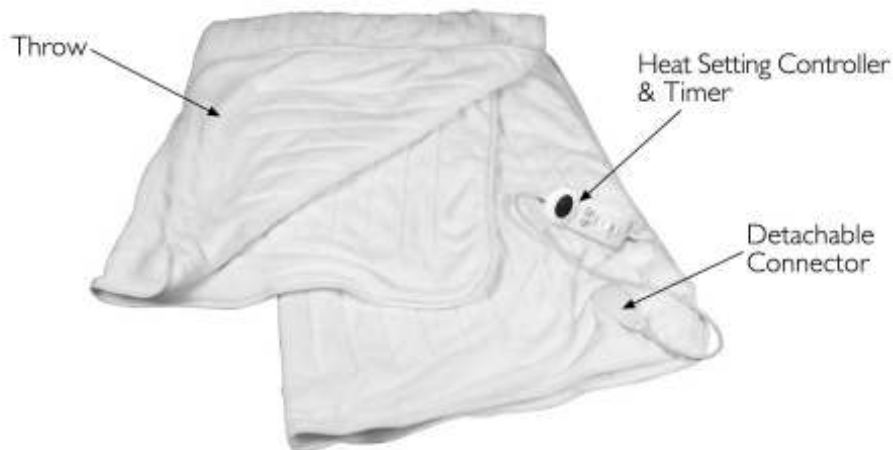

Basic Guide to Starting up

- This is designed to be used as a throw only. It is recommended to connect to the mains supply via a 30mA RCD protection device.
- Drape the throw over the shoulders and smooth out to remove any creases. The controller should be positioned close to hand so that the temperature and time can be adjusted without walking around with the throw on.
- Connect the plug to the mains supply and switch on if applicable. Slide the large switch up to operate the controller, the two LED displays will light. Press the left button on the controller to select the desired heat setting in steps from 1 to 9 with 1 being the lowest and 9 the highest.
- Press the right button to advance the time 'on' setting from 1 to 9 hours, press the timer button once more and 'H' will appear on the right hand display this indicates that the throw is continually heating.
- NOTE On initial use and after washing, it is recommended that the throw is operated for 2 hours to ensure it is completely dry. Ignore any slight odour that may occur on first use.
- Do not sleep with the controller set to the maximum heat. Switch off when the heating is no longer required – do not leave on indefinitely. Unplug the throw from the mains when not in use.

Care and maintenance

Before cleaning

- Disconnect the throw from the mains supply, and then disconnect the controller from the throw by lifting the retaining clip on the connector then separating the two parts. Store the controller away carefully.

Cleaning

- Do not dry clean this throw
- The throw has waterproof heating elements making it safe to immerse in water and wash by hand or machine. Always remove the controller first – do not allow any part of the controller to be immersed in any liquid.

Hand wash

- After disconnecting the controller, immerse the throw in a luke-warm, mild detergent, water solution. Soak for five minutes, remove and gently squeeze out as much water as possible (DO NOT WRING THE THROW). Rinse in clean water, squeeze out as much water as possible (again without wringing).

Machine Wash

- With the controllers detached the throw can be washed in a machine (size permitting).
- Wash on WOOL or DELICATES cycle with a neutral detergent or mild soap powder at a wash temperature of 40°C. Do not use high speed or extra spin cycles.

Drying

- Drape the throw over a cloths line to dry – do not use pegs to secure the throw.
- Allow to dry naturally – do not use any form of direct heat such as a hair dryer or heater. Ensure that the throw and its connector are fully dry before re-connecting the controller and using.

Damage Check

- The throw, controller and cable must be regularly checked for damage. If any damage or wear is found have the product checked by a qualified engineer.

Environmental Protection

Waste electrical products should not be disposed of with household waste. please recycle where facilities exist. Check with your local authority or retailer for recycling advice.



Declaration of Conformity

We ACL Group (International) Ltd. Doncaster, England, DN6 8LZ declare that the Homefront Heated Electric Throw has been manufactured according to our full quality assurance procedures.



The declaration is to certify that it conforms to CE, WEEE, RoHS and EMC directives

A handwritten signature in black ink, appearing to read 'A. Garnett'.

Mr A Garnett